

## It is important to read the instructions first before mounting

Please install batteries in the UV1 sensor first  
and then install batteries into temperature sensor

### (1) Hardware installation uv1

The first thing is to **restart your weather station console** by removing the battery compartment cover, which is located at the back of your consul you will see a small hole {reset} use a paperclip to insert it into the hole press firmly replace the battery compartment cover


Your console display will now search for all your senses

### (2) Make sure you have the latest version of the weather display software current version 11.x

On the main page of weather display software **click on setup** then go down to and click on **advanced/Misc settings**

**Click on WMR968, modified sensors (rain duration/UV)**  
**Enter the information from image fig A**

Fig A

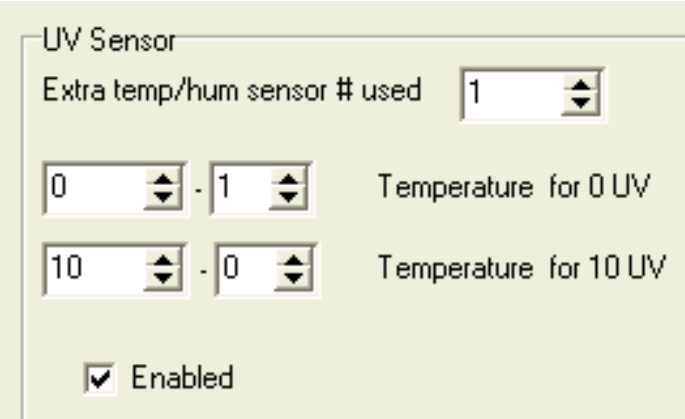

UV Sensor

Extra temp/hum sensor # used 1

0 - 1 Temperature for 0 UV

10 - 0 Temperature for 10 UV

Enabled

## Important calibration for UV1

To work out if you need a offset cover the Uv1 sensor so the sensor is in total darkness check in whether display what your extra temperature sensor is reading for example if it is reading 0.6 this is the - offset you need to enter this in the **extra temp. Offsets** for the number you have set in the extra temperature sensor device

Go back to **control panel** click on **Offsets & Initial Rain** then click on **extra Temp. offsets**  
**Enter a offset in temperature, offset extra temp. 1 (10th of a C)**